Tandberg MXP TRC4 Remote Control Basic Operation

Press any source to auto send content to the Far End.

Mutes and un-mutes the microphone

Moves camera and menu navigation

Adjusts the system's volume

Changes between full and split screen layouts

Takes you one step back in – any menu and also acts as the delete key when entering data

Initiates the call process

Press and hold number to save camera preset. To activate: Note Preset key instructions

Takes a snapshot of your video call

Press Preset + a number to activate a preset

Toggles between main camera and presentation source

Displays Menu and selects onscreen items

Controls the camera's zoom

A Toggle button which displays outgoing video and the far-end

Dial stored videoconference sites

End the videoconference or place system into standby mode

Letter keys function in the same manner as a cell phone

3 det

6 mno

9 vegz

sik

TA A D B H B C

To be the

2 abc

5 M

8 tuy

Touch tones must be pressed first if you are entering extensions

Allows immediate control of the Far End camera when no menus are present on the display



Calling a Site

Making a Call -Manual

- Press Green Call Button
- Enter number in Dial Number field
- Press Green Call Button

Making a Call -Phone Book

- Press Phone Book Button
- Use arrow keys to highlight site
- Press Green Call Button

Camera & Source Control

Move Camera

- Arrow Keys pan/tilt camera
- Zoom Key zooms in and out
- Menu must be off the screen to move the camera

Select PC or other Sources

- Press the button at the top of the remote control to select the Source you want to send

How to Get Help

SW/WC Service Cooperative Technology Support Helpdesk

(507) 537-2260

helpdesk@swsc.org

Available 7:30 AM to 4:00 PM Mon. – Fri. Closed on SW/WC observed holidays

Visit www.swsc.org/WAN for more resources